

STAINLESS STEEL WIRE BASKET DRAWERS



A FEW TIPS BEFORE YOU BEGIN

If you are installing several baskets into one cabinet:

1. Group taller items together and store them in 1 or 2 basket drawers, which will need more height clearance.
2. Install the first basket at the bottom of the cabinet. Place the tallest item you plan to store and allow an additional 20mm above.
3. Install the next basket with shorter items, which will require less height clearance.

NOTE: The screws provided are suited to 16mm timber/melamine board. Please use alternative screws for other surfaces.


GENERAL CARE

Stainless steel wire basket-warm soapy water. Zinc plated slides: Keep slides dry and wipe down with damp cloth and then wipe them dry. Avoid contact with water and other corrosive materials. If you require stainless steel slides, please contact us for a quote.

(C) SIDE MOUNT SLIDES - WITH HOOK (SL.450.H)

450mm zinc plated full extension ball bearing slides with hook / weight capacity up to 40kgs

- These slides are suitable for a wide range of cabinet widths and can be used with spacers, packers or batons.
- Minimum cabinet width = basket width + slides 26mm (ie, 2 x 13mm) + optional spacers.
- YouTube [installation clip](#) showing installation with batons.

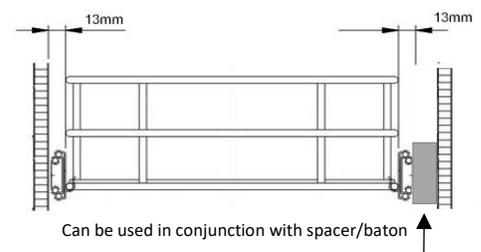


Front of slide has the black bumper to prevent marks on doors.



STEP 2: Turn the slides over & extend them fully until you can see the black disconnect lever. Pinch it in the direction of the arrow.



STEP 3: Install the flat piece ('inner member') to cabinet wall. Refer to section (A) as a guide.

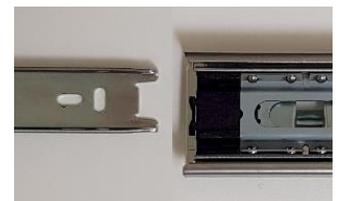

STEP 4: To re-attach the slides, ensure the ball bearings are at the front of the slide. Connect the slide and push to the back. Clip basket in the bottom wire.

STEP 1: Mark how far back you want the slides to be and mark a pencil line. We suggest 10+mm from the cabinet edge to the black slide bumper.