## SIDE MOUNT SLIDES



## **GENERAL CARE - CLEANING**

Zinc plated slides: keep slides dry. Wipe down with damp cloth and then wipe them dry. Avoid contact with water and other corrosive materials. If you require stainless steel slides, please contact us for a quote.

NOTE: The screws provided are suited to 16mm timber/melamine board. Please use alternative screws for other surfaces.

## 400mm zinc plated full extension ball bearing slides

- ☐ Overall product dimensions: 405L x 450H x 125Wmm
- ☐ If you are installing where there is a hinged door, packers may be required (supplied separately).


## **TIPS & TROUBLE SHOOTING**



**STEP 1:** Extend slide fully to disconnect the slide. Locate the white lever and pinch it to uncouple the slides.


STEP 2: Mark the desired setback from the cabinet edge. We suggest 20mm.

**STEP 3:** Use the below hole guide to measure and mark your holes. Note the correct front & back position of the slide. 3 screws are adequate. Position one towards the front, middle and back of the slide.

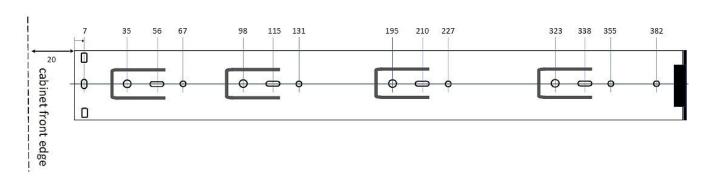



**STEP 4:** To reconnect the slides, slide the bearing to the front.





**STEP 5:** Insert the inner part of the slide into the track and push until you reach the end of the slide.

Thank you for choosing Tansel.